


# EasyLink+

## Quick Reference Guide

A pupils radio aid system consists of two parts:

- Transmitter (worn by teacher) and
- Receivers (worn by pupil)

For audio shoe advice visit [www.phonak.com/eschooldesk](http://www.phonak.com/eschooldesk)

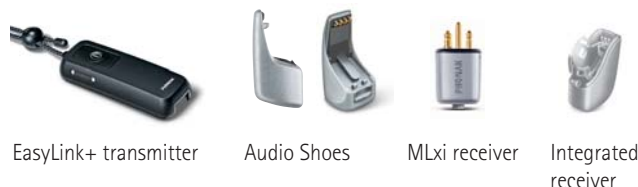

### On/Off Button



Hold the on/off button down for 2 seconds to turn off and on.

### LCD Display




Channel Number  
Battery Status

### Synchronising


To synchronise a receiver, turn the EasyLink+ on within a 50cm range of the receiver. The receiver should beep through the hearing aid to confirm this action.

### Change Channel

Push button down with pen to scroll channels. Release to stop and synchronise any receivers within range.

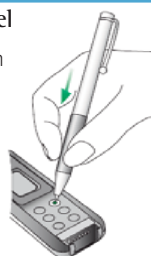

### Wearing & Adjustment

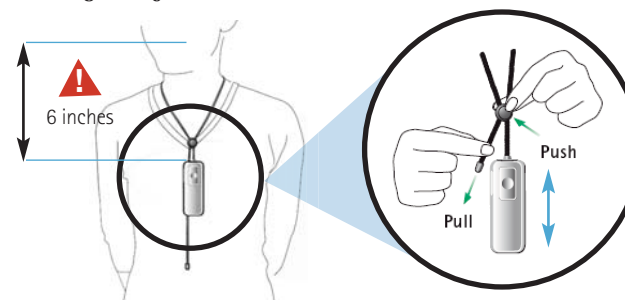

### Microphone Directionality




### Audio Input



### Charging

EasyLink+ interface should be attached to charge the EasyLink+ or attach external devices.

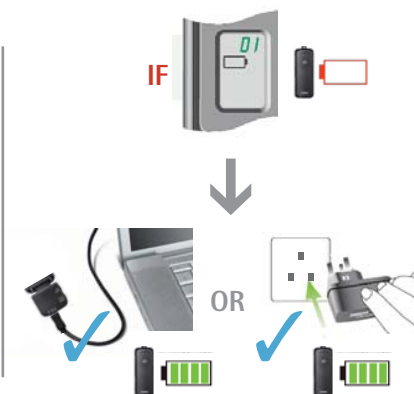

### EasyLink+ Compatability

Easylink+ is fully compatible with ALL of Phonak's FM receivers, past and present (examples shown). Simply turn on the transmitter... and **start teaching!**



For more information about your EasyLink+ and how to use other functions please consult the user manual, or visit [www.phonak.com/eschooldesk](http://www.phonak.com/eschooldesk)

**PHONAK** life is on